


Installation Steps: **PIEDMONT** **CHAIN CO.**

CAR
& TRUCK
DIAMOND PATTERN
1500D, 2300D, 2500D

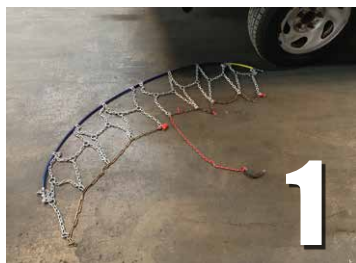


Lay the chain on the ground making sure that it is not tangled in any way.



Pass the cable behind the tire from left to right. **The yellow end of the cable should be on the left side of the tire.**



Lift the ends of the cable to the top of the tire and connect them.

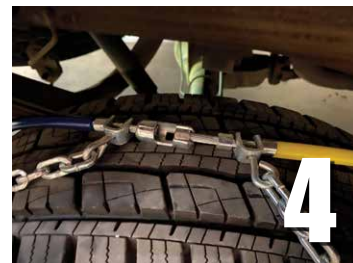

Lay the connected ends on the top of the tire.



Connect the outer side chain. This has three links for adjustment. Pick one depending on the tire size.



Push the cable to the back side of the tire. **The cross chains should now be centered.**



Run the tension chain through the locking device at the bottom of the tire.



Pull the tension chain as tight as possible.



Run the excess tension chain through the gathering rings. Tension chain may also be weaved around the side chain.



Connect the rubber fastener to the side chain.



Now, enjoy your new tire chains!