



Lay the chains out on the ground making sure the chain is not twisted in any way.




Drape chain over tire. Center chain on the tire, cross-chain hooks curved away from the tire, and the side chain with "quick hook" located on the inside of the tire.




Tuck the leading end of the chain under the front of the tire.



Drive forward until the leading end of the chain is behind the tire.

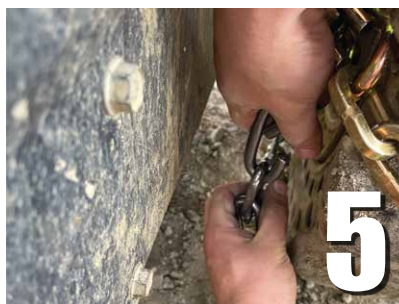


Connect the ends of the chain on the inside of the tire first by hooking the "quick hook" to the opposite end the chain as far as possible.

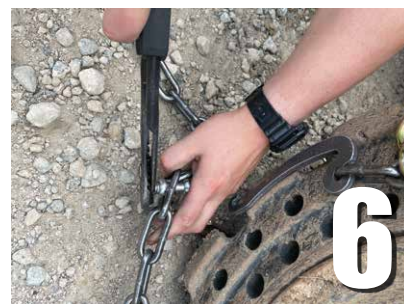

Remove cross chains as needed for wear on the tire by unscrewing u-bolts on cross chains. Save cross chains removed for future use on tires with less wear and wider diameter.



Connect outside chain using the retaining hook. Chain should be as tight as possible. Fold the retaining hook back and secure with the hook collar.

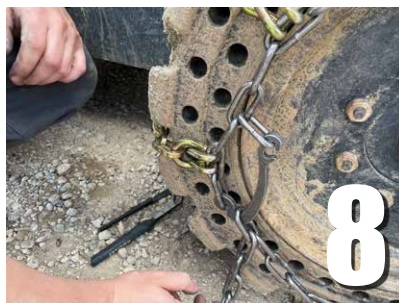

Secure excess side chain. Removing excess side chain may prevent future use on tires with less tread wear. If removing excess side chain, it is recommended to leave extra links to ease future installation.



The chain should be centered on the tire and the cross chains should go straight across the tread of the tire. Enjoy your chians!