

Installation Steps: **PIEDMONT CHAIN CO.**

TRUCK LADDER STYLE CABLE 2000C, 3000C



Lay the cables out in front of the tire making sure there are no tangles.




Drape the cable over the tire making sure it is centered.



Tuck the cables under the front of the tire and drive forward until the leading edge of the cable is behind the tire. **Be careful not to drive over the fasteners because damage might occur.**



The lever fastener should be on the outside of the tire and the cross member hooks should be facing away from the tire.

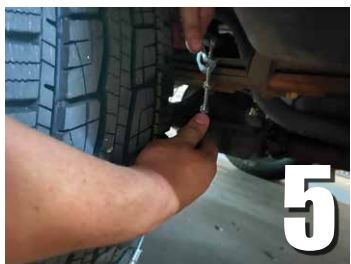

Connect the inside fastening hook first as tightly as possible making sure the cable remains centered on the tire.



With the lever fastener in the open position, connect the ends of the cables as shown. Note that there should not be more than a 1 nub difference between the inside and outside cables.



Rotate the lever handle to the closed position to tighten the cables and lock into place.



Re-adjust the cables if necessary making sure they are as tight as possible.



If needed, use the retaining clips to secure the ends of the cable. **Failure to do so may cause damage to the vehicle and/or cables.**



After installing the cables, drive approximately 1/4 mile. Check the cables and tighten if necessary.



While using cables, occasionally check to make sure they are properly installed. **Do not exceed 30 MPH while using cables.**



Now, enjoy your new tire chains!